

# REMINGTON®

## PROFESSIONAL BEARD & GOATEE GROOMER



### Use and Care Guide

MB-1000

#### Register Your New Product Today!

By registering your new Remington® product, you will receive these important benefits: Proof of Ownership • Product Protection • Product Registration • Special Offers  
Register online at: [www.RemingtonProducts.com](http://www.RemingtonProducts.com)

## IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

### READ ALL INSTRUCTIONS BEFORE USING.

### KEEP AWAY FROM WATER.

### DANGER

*As with most electrical appliances, electrical parts are electrically live even when switch is off.*  
To reduce the risk of death by electric shock:

- Do not reach for a trimmer that has fallen into water. Unplug immediately.
- Do not use while bathing or in a shower.
- Do not place or store trimmer where it can fall or be pulled into a tub or sink. Do not place in or drop into water or other liquid.
- Except when charging, always unplug this trimmer from the electrical outlet immediately after using.
- Unplug this trimmer before cleaning.

### WARNING

To reduce the risk of burns, fire, electric shock or injury to persons:

- Close supervision is necessary when this appliance is used on or near children or persons with certain disabilities
- Do not use on people who are asleep.
- Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by manufacturer.
- Always ensure the trimmer is switched off when cleaning or when using in water.
- Do not submerge in water. Clean under running water only.
- Always store in a moisture-free environment.
- Keep the charging stand cord away from heated surfaces.
- Never operate this appliance if the charging base has a damaged cord or plug, if it is not working correctly, if it has been dropped or damaged, or dropped into water. If the supply cord or plug of this appliance is damaged the adapter must be replaced.

- Do not operate this appliance with a damaged or broken comb or cutter, or with teeth missing from the blades as injury may occur.
- Never drop or insert any object into any opening.
- Do not use the trimmer if the skin is infected or broken.

- Do not use outdoors or where aerosol (spray) products are being used, or where oxygen is being administered.
- Do not leave the trimmer in direct sunlight or in a very warm place.
- For household use only.

### KEEP AWAY FROM CHILDREN

## SAVE THESE INSTRUCTIONS

## Product Features

The Remington® Professional Beard & Goatee Groomer provides a quick and easy way to maintain a well-groomed look for your facial hair. Short hair styles and trimming detail can also be created. To help you define head-turning styles and to extend the life of your Mustache and Beard Trimmer, please read all instructions before using.

### Product Features

- A. On/Off Switch
- B. 38mm T Trimmer Blade
- C. Charge Indicator Light
- D. Charging Stand
- E. 20mm Detail Trimmer Blade
- F. 2 Reversible Attachment Combs for the 38mm Trimmer Blade (1.5mm/3mm comb and 6mm/9mm comb)
- G. Cleaning brush, and Mustache & Beard Comb



## Operating Your Trimmer

### Charging Your Trimmer

Before using this trimmer for the first time, charge it for 14-16 hours.

- Place your trimmer into the charging stand and then plug the charger adapter unit into a power outlet. Switch the power on and the red light will glow to indicate that it is charging.
- The batteries cannot be overcharged, but we recommend that charging be discontinued if the trimmer will not be used for a long period of time.
- The trimmer will be fully charged in 14 hours.
- If the trimmer has not been used for a month or longer, it is advisable to recharge it for 14-16 hours.
- To preserve the life of the batteries, discharge them by running the trimmer until the blades move slowly. Switch off and recharge for 14-16 hours. Do this every six months.

### Before Using Your Trimmer

Professional Beard & Goatee Groomer is washable for easier cleaning. Therefore to maintain the performance of the cutters, oil before each use and after rinsing. Turn the trimmer on to distribute the oil evenly. Prior to trimming hair, wipe off any excess oil. Be sure that the trimmer is turned off when applying the oil.

## How to Use

### Attachment Combs

These attachment combs are for use with the 38mm trimmer blade only. To attach, gently slide the comb over the trimmer blade. An arrow on the side of the comb indicates the length which the hair will be cut.

Here's what the length settings mean in inches:

Comb attachment	Hair length
1.5mm	1/16 inch
3mm	1/8 inch
6mm	1/4 inch
9mm	3/8 inch

Each comb attachment is marked accordingly on its middle surface.

When first using, you may want to begin with the longest attachment comb to avoid trimming hair too short. Cut the hair gradually using short strokes only to work gradually over the entire head. Always take off a little hair at a time, you can always trim off additional hair later. As you work, comb the hair frequently back into the style that you are cutting.

### Best Technique

Here are a few tips for trimming the various parts of your face, head and body (For guide only).

### To Thin & Taper The Beard & Mustache

- Before you begin, comb your hair in the direction in which it grows so that the hairs are at their maximum height and facing the same direction.
- Attach an attachment comb to the 38mm Trimmer Blade.
- Place the flat top of the trimmer comb against the skin.
- Slowly slide the trimmer through the hair. Repeat from different directions as necessary.
- If hair builds up in the trimmer comb during the trimming process, switch the unit off, pull off the comb and brush/rinse off.

### To Define The Beard & Mustache Line

- Hold trimmer with 20mm Trimmer Blade facing you.
- Start with edge of beard/moustache line and gently lower the Trimmer Blade onto your skin. Use motions towards edge of beard/moustache line to trim to desired locations in facial area and away from beard in neck area.

### To Cut Short Hair Styles

- Hairs should be dry and without any waxes or lotions before using trimmer.
- Comb your hair in the direction in which it grows so that the hairs are at their maximum height and facing the same direction.
- Place the flat top of the trimmer comb against the skin.
- Slowly slide the trimmer through the hair. Repeat from different directions as necessary.
- If hair builds up in the trimmer comb during the trimming process, switch the unit off, pull off the comb and brush/rinse off.

### To Draw Trim Lines Into Head Hair

- Attach the 38mm Trimmer Blade.
- With blade facing the area where you would like to start your trim line, gently lower onto head.
- Move the trimmer gently along your head to create the style you require.

! For more precise designs, attach the 20mm trimmer blade.

### Trimming Edge Of Sideburns

- Using the 20mm trimmer blade hold the trimmer with blade facing you.
- Start with edge of sideburn, and with the cutting blades resting lightly against your skin, use motions towards edge of side burn line to trim to desired locations in facial area.

### Trimming The Nape Of Your Neck

- You will need a hand mirror for this operation if performing it alone - or get your partner to help!
- Before you begin, attach the 38mm T-Trimmer Blade.
- Use your fingers to lift the hair at the base of your head up off the neck. Your index finger should be covering the roots of the hairs you are lifting to prevent accidental removal by trimmer.
- Using your other hand, hold the trimmer to the base of your neck with the cutting unit facing up, and move the trimmer up the length of the neck until the unit touches your finger covering the hair roots at the base of your head. Be sure to move the unit slowly when performing this operation and to keep the hair roots at the base of your head out of the way of the trimmer.

## Cleaning & Safety

### Care For Trimmer

Your **Professional Beard & Goatee Groomer** is designed to give you years of comfortable use. To ensure that you get optimal performance from your trimmer, follow these maintenance tips:

#### After each use

- To clean unit wipe with a damp cloth and dry immediately.

#### Every six months

- At regular intervals the Blade Set should be removed and cleaned. To remove the Blade set, remove the two screws holding the large blade to the trimmer body. The Blade Set will separate from the body and can be cleaned as necessary. Replace the Blade Set and place a few drops of trimmer or sewing machine oil onto the blades.

### Cleaning Cautions

- Use only trimmer or sewing machine oil as other oils will dry out and become sticky, resulting in poor blade action. Do not use too much oil as it may spray.
- Do not use liquid cleaners on the cutters or harsh or corrosive chemicals on the trimmer casing.

#### Protecting The Environment

The Trimmer contains Nickel-Cadmium batteries and should not be disposed of in household waste at the end of its useful life.

**Caution:** Do not put in fire or mutilate your battery packs as they may burst or release toxic materials. Do not short circuit as this may cause burns.

Disposal can take place at an appropriate collection site.

The EPA-certified RBRC® Battery Recycling Seal on the nickel-cadmium (Ni-Cd) battery indicates Spectrum Brands, Inc. is voluntarily participating in an industry program to collect and recycle these batteries at the end



of their useful life, when taken out of service in the United States or Canada. The RBRC® program provides a convenient alternative to placing used Ni-Cd batteries into the trash or the municipal waste stream, which may be illegal in your area. Please call 800-8-BATTERY<sup>SM</sup> for information on Ni-Cd battery recycling and disposal bans/restrictions in your area. Spectrum Brands, Inc. involvement in this program is part of our commitment to preserving our environment and conserving our natural resources.

## Performance Guarantee

### Limited Two-Year Warranty

Spectrum Brands, Inc. is a global consumer products company with a diverse portfolio of world-class brands, including Remington-branded electric shavers. Spectrum Brands, Inc. warrants this product against any defects that are due to faulty material or workmanship for a two-year period from the original date of consumer purchase. This warranty does not include damage to the product resulting from accident or misuse.

If the product should become defective within the warranty period, we will replace it free of charge. Return your product and sales receipt with your name, address and day time phone number to: Remington Returns Center, 507 Stokely Dr., P.O. Box 1, Deforest, WI 53532. For more information call 800-736-4648 in the us or 800-268-0425 in Canada.

#### Exclusions

The trimmer blades are consumable parts and are excluded from this guarantee, as are defects that result from misuse or abuse of your trimmer.

#### KEEP ORIGINAL SALES RECEIPT AS PROOF OF PURCHASE FOR WARRANTY PURPOSES.

This warranty does not cover products damaged by the following:

- Accident, misuse, abuse or alteration of the product
- Servicing by unauthorized persons
- Use with unauthorized accessories
- Connecting it to incorrect current and voltage

- Wrapping cord around appliance causing premature wear & breakage
- Any other conditions beyond our control

No responsibility, obligation, or liability is assumed for the installation or maintenance of this product.

**SPECTRUM BRANDS, INC. SHALL NOT BE RESPONSIBLE FOR ANY INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT. ALL IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OF FITNESS AND MERCHANTABILITY, ARE LIMITED IN DURATION TO TWO YEARS FROM DATE OF ORIGINAL PURCHASE.**

This warranty gives you specific legal rights and you may also have other rights which vary from state to state or province to province. Some states do not allow the exclusion or limitation of incidental, special or consequential damages.

### Spectrum Brands, Inc. Money-back Offer

If within 30 days after you have purchased your Remington® branded product, you are not satisfied and would like a refund, return it with the sales slip indicating purchase price and date of purchase to the retailer from whom it was purchased. Spectrum Brands, Inc. will reimburse all retailers who accept the product within 30 days from the date of purchase. If you have any questions concerning the money-back guarantee, please call 800-736-4648 in the us or 800-268-0425 in Canada.

120 VAC 60 Hz

**Questions or comments:**  
Call 800-736-4648 in the US  
or 800-268-0425 in Canada.

or visit [www.RemingtonProducts.com](http://www.RemingtonProducts.com)

REMINGTON is a trademark of ROVCAL, INC.

Dist. by: Spectrum Brands, Inc.,  
Madison, WI 53711

Dist. by: Spectrum Brands Canada, Inc.,  
Mississauga, ON L5L 0A1

©2010 ROVCAL, INC.  
03/10 Job# CS38162

**Manufactured to Remington's specifications in the PRC.**

**T22-29255**

Contains  
 listed adaptor