REMINGTON®

TOUCH CONTROL

BEARD & STUBBLE TRIMMER

MB4550

Become a Fan:
Remington Hair Care & Grooming

Get the free mobile app at
http://gettag.mobi

Use and Care Guide

Register Your New Product Today!

By registering your new Remington® product, you will receive these important benefits:
Proof of Ownership • Product Protection • Product Registration • Special Offers
Register online at: www.RemingtonProducts.com

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be observed, including the following; read all instructions before using this appliance.

DANGER

To reduce the risk of electric shock:

- Do not reach for an appliance that has fallen into water. Unplug it immediately.
- Do not use while bathing or in the shower.
- Do not place or drop into water or other liquid.
- Do not place or store this appliance where it can fall or be pulled into a tub or sink.
- Except when charging, always unplug this appliance from the electrical outlet immediately after using.
- Unplug this appliance before cleaning it.

WARNING

To reduce the risk of burns, fire, electric shock or injury to persons:

- This appliance is for household use only.
- An appliance should never be left unattended when it's plugged in, except when charging a rechargeable appliance.
- Close supervision is necessary when this appliance is used by, on, or near children or persons with special needs.
- Use this appliance only for its intended use as described in this manual.
- Do not use attachments not recommended by the manufacturer.
- Keep the cord away from heated surfaces.
- Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or if it has been dropped into water. If any of these things happen, return the appliance to an authorized service center for examination and repair.
- Never drop or insert any object into any of the appliance's openings.
- Do not use outdoors or operate where aerosol (spray) products are being used, or where oxygen is being administered.
- Make sure the cord is disconnected from the trimmer while storing this appliance and cord in a moisture-free area. Do not store it in temperatures exceeding 140°F (60°C).
- Do not use this appliance with a damaged or broken cutter unit, as injury may occur. Always make sure blades are aligned properly.
- Always attach plug to appliance and then the adapter to the outlet. To disconnect, turn all controls to OFF, then remove adapter from outlet, then detach power cord from the trimmer for storage.
- Do not use an extension cord or a voltage converter with this appliance.
- Do not wrap the cord around the appliance.
- Dispose of used batteries properly. Do not incinerate. Batteries may explode if overheated. Do not wrap in metal or aluminum foil. Wrap in newspaper before discarding. It is suggested that you contact local battery redemption site(s) in your area.
- Do not run the product when charging via USB port on a PC.

SAVE THESE INSTRUCTIONS

Product Features

LCD Screen

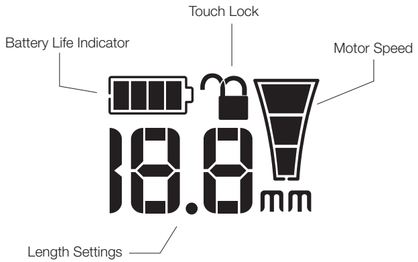

When fully charged, the unit can be used for up to 40 minutes of cordless trimming.

Conversion Guide

Stubble	Goatee	Beard
1/16” (1.6mm)	3/16” (4.8mm)	3/8” (9.5mm)
1/8” (3.2mm)	1/4” (6.4mm)	1/2” (12.7mm)
–	5/16” (8.0mm)	5/8” (15.9mm)
–	–	11/16” (17.5mm)

How to Use

Charging Your Trimmer

- Trimmer must be turned off.
- Insert the adapter plug into the bottom of the trimmer and plug the adapter unit into a power outlet.
- The trimmer has a typical charging time of 90 minutes.
- The batteries cannot be overcharged, but it is recommend that charging be discontinued if the trimmer will not be used for a long period of time. The battery life indicator will show that the unit is charging. The LCD screen will illuminate for several seconds before dimming, when fully charged, the battery life indicator will show a full battery level and the LCD screen will turn off.
- It is advisable not to use this trimmer directly from the power outlet when it has been fully charged, but if while using the trimmer in cordless mode there is a noticeable drop in power, you can use directly from the power outlet.
- If the trimmer has not been used for a month or longer, it is advisable to recharge it for 90 minutes.
- To preserve the life of the batteries, discharge them by running the trimmer until the blades move slowly. Switch off and fully recharge. Do this every six months.
- Charge the trimmer at temperatures between 40º and 90ºF.
- Nickel-Metal Hydride batteries are included. See battery removal section for proper disposal of batteries.
- If trimmer battery is completely discharged and you desire to use the trimmer in corded mode immediately, please note that there will be a 10 second delay before the motor and LCD can be activated. There will also be a slightly longer delay before the touch interface can be activated.

USB charging

- Trimmer must be turned off.
- Insert the USB cable into the bottom of your trimmer and the plug into the USB port on your PC. The battery life indicator will show that the unit is charging. The LCD screen will illuminate for several seconds before dimming, when full charged, the battery life indicator will show a full battery level.
- The trimmer has a typical charging time of 90 minutes.
- Do not run trimmer when charging via USB port on your PC.

Touch Interface

- The motorized comb can be adjusted by simply tapping the Touch Length Control up or down arrows. You may also hold the arrow down to move the comb continously. The LCD screen displays 0.1mm increments.
- Motor speed can be adjusted by tapping the Touch Tri Speed icon.

Touch Tri Speed

There are 3 settings for the trimmer:

- The trimmer will default to the lowest motor speed initially.
- If more or less power is desired tap the Touch Tri Speed icon. Motor speed level is displayed on LCD screen.

Touch Lock

- Once your desired length and motor speed is set, lock the device by sliding the switch in the lock position.

Product System Reset

The user will never have to force a system reset under normal conditions. If the trimmer experiences abnormal behavior, such as low or high touch sensitivity, the system can be reset.

- Hold power button for 8 consecutive seconds.
- System will show 18.8mm, full battery, full lock and full boost level.
- Ensure no objects, hands or fingers are near the touch buttons.
- Push the power button once.
- Comb will travel down to 0.4mm.
- Let the product sit until the screen dims.
- Product is now ready, turn it on and confirm function.

Cleaning & Maintenance

Cleaning & Maintaining Your Trimmer

After each use:

- Brush the accumulated hair from the cutters. **Do not submerge the trimmer in water. This product is not washable.**

Cleaning Cautions:

- Do not expose this product to water, unit is not washable.

Storage

- Always store this appliance and cord in a moisture-free area.
- Do not wrap the cord of the charging adaptor around the appliance.
- Do not store in temperatures above 140ºF.

Troubleshooting

The trimmer does not work when turned on:

- Trimmer must be charged a minimum of 90 minutes, or use trimmer while plugged into wall.

Trimmer cutters do not move:

- The cutting unit may be dirty and clogged. Clean the unit as directed in Cleaning & Maintaining section.

Trimmer does not hold charge:

- Fully discharge battery by running trimmer until it stops; then follow recharging instructions (see section on Charging Your Trimmer).

Trimmer does not function properly, touch buttons not working:

- Reset the product following instructions in How to Use section.

U.S. residents: To order accessories, contact us at 800-392-6544, visit us at www.RemingtonProducts.com, or visit your local retailer.

Battery

Battery Removal

When your rechargeable trimmer reaches the end of its useful life, the batteries must be removed and recycled or disposed of properly in accordance with your local and state requirements.

The following procedure should be followed for battery removal:
Unplug the MB4550

- Run down the trimmer battery;
- Remove the “comb” attachment;
- Detach the “blade head”;
- Remove the “head clip” using a screw driver;
- Using a screwdriver carefully pull out the “top housing”
- Unscrew the six screws on the “motor bracket” then lift out the “bottom housing;
- Remove the “upper circuit board”;
- Cut the motor connecting wires and remove the “motor bracket”, “front portion of the motor bracket”, “comb rail”, “middle motor”, and gear chains”;
- Disconnect the batteries from the lower circuit board by solder-iron then remove;
- The batteries are to be disposed of safely.

Warranty

Limited Two-Year Warranty

Spectrum Brands, Inc. warrants this product against any defects that are due to faulty material or workmanship for a two-year period from the original date of consumer purchase. This warranty does not include damage to the product resulting from accident or misuse.

If the product should become defective within the warranty period, we will replace it free of charge. Return your product with your name, address and day time phone number to: Remington Returns Center, 507 Stokely Dr., P.O. Box 1, Deforest, WI 53532. For more information call 800-736-4648 in the US.

This warranty does not cover products damaged by the following:

- Accident, misuse, abuse or alteration of the product
- Servicing by unauthorized persons
- Use with unauthorized accessories
- Connecting it to incorrect current and voltage
- Wrapping cord around appliance causing premature wear & breakage
- Any other conditions beyond our control

No responsibility, obligation, or liability is assumed for the installation or maintenance of this product.

SPECTRUM BRANDS, INC. SHALL NOT BE RESPONSIBLE FOR ANY INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT. ALL IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OF FITNESS AND MERCHANTABILITY, ARE LIMITED IN DURATION TO TWO YEARS FROM DATE OF ORIGINAL PURCHASE.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state or province to province. Some states do not allow the exclusion or limitation of incidental, special or consequential damages.

Spectrum Brands, Inc. Money-back Offer

If within 30 days after you have purchased your Remington® branded product, you are not satisfied and would like a refund, return it with the sales slip indicating purchase price and date of purchase to the retailer from whom it was purchased. Spectrum Brands, Inc. will reimburse all retailers who accept the product within 30 days from the date of purchase. If you have any questions concerning the money-back guarantee, please call 800-736-4648 in the US.

100-240 VAC 50-60 Hz

Questions or comments: Call 800-736-4648 in the US. or visit **www.RemingtonProducts.com.**

Dist. by: Spectrum Brands, Inc., Madison, WI 53711

REMINGTON is a registered trademark of Spectrum Brands, Inc., or one of its subsidiaries.

© 2011 SBI

6/11 Job# CS41771_REV A

Manufactured to Remington’s specifications in the PRC. **T22-32687**

Contains

Intertek

listed adaptor